

Tie-Down Kit Installation Instructions


For a thorough demonstration of how to properly install the Tie-Down Kit, please watch the video available at www.yeticoolers.com/tiedown. If you don't have access to the video, please follow the condensed instructions below.

1. Mounting the Stainless Steel Deck Plates

- A. Position the cooler in the desired location.
- B. Align and center the deck plates on either end of the cooler.
Position the center of the deck plate anywhere from 1" to 2" away from the cooler's recessed side wall.
- C. For best results, mark the four screw holes and pre-drill with a 9/64 drill bit.
- D. Using the provided screws, securely fasten the deck plates down.

2. Trim the Strap to the Desired Length

- A. See recommended strap lengths below for each cooler size. These recommended lengths allow enough excess strap to cinch the cam-buckle using both hands.
- B. Trim strap. For a clean appearance the strap should be cut with scissors and the edge melted with a flame.

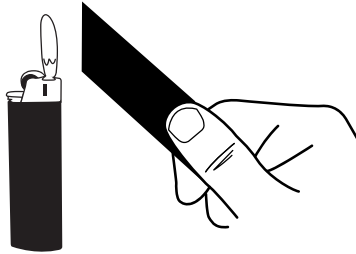

The recommended strap lengths (inches) for the different size YETI® Coolers are listed below.

Roadie 20 : 34"

Tundra 35 : 36"

Tundra 45 : 37"

Tundra 50 : 42"

Tundra 65 : 38"

Tundra 75 : 42"

Tundra 105 : 44"

Tundra 110 : 44"

Tundra 125 : 44"

Tundra 150 : 46"

Tundra 250 : 46"

If you have a different cooler than what is listed, we recommend trimming the strap leaving enough excess to cinch the cam-buckle with two hands.

www.yeticoolers.com